TRICASTER MINI CONTROL PANEL

Though primarily intended for service with TriCaster Mini, some find this diminutive control panel the ideal traveling partner, providing tactile control from a small footprint to deliver professional result from the office, an event, or almost anywhere you like.

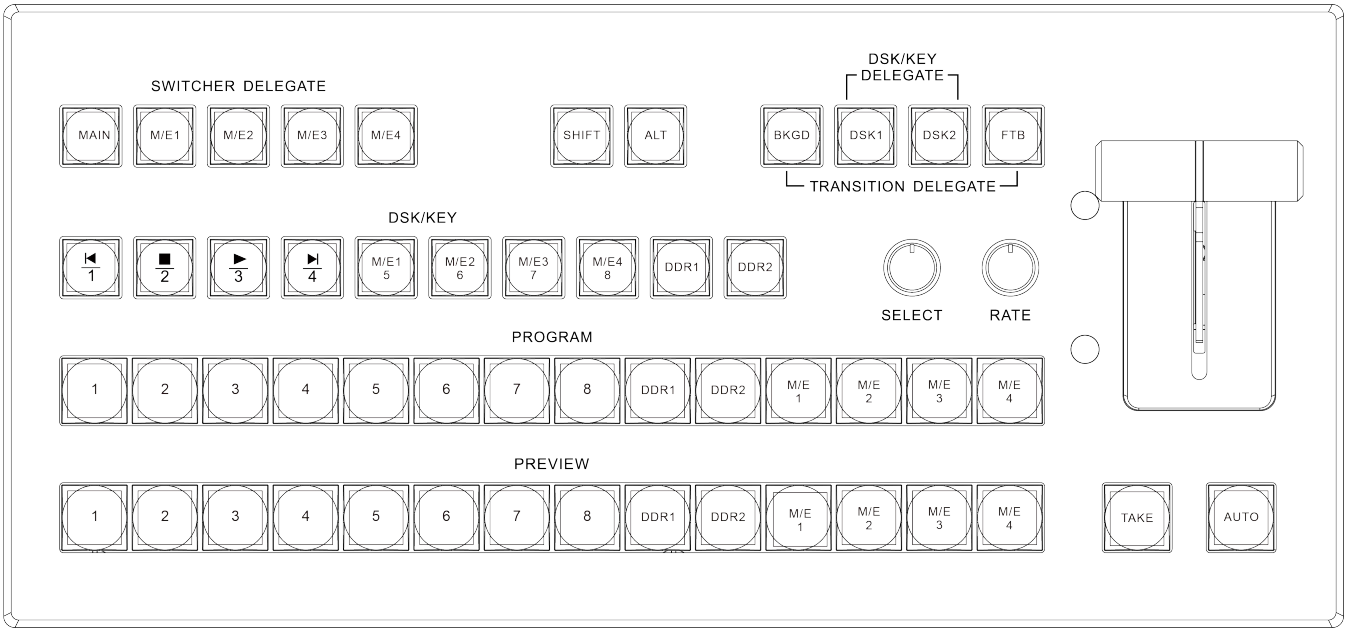

- When SHIFT is pressed, DSK/KEY row buttons execute their secondary function (shown above on the button label), as follows:
    - The first four DSK/KEY row buttons, when 'shifted', provide Media Player transport control.
    - To delegate these operations to a specific Media Player:
    - Hold SHIFT + ALT together, and punch DDR1 or DDR2 in the same row.
    - The next four DSK/KEY row buttons, when 'shifted', select M/Es 1-4.
- Holding down ALT while making a PROGRAM, PREVIEW or DSK/KEY row selection addresses sources from the second *bank* of Switcher sources, in the order listed below:

BFR 1	BFR 2	BFR 3	BFR 4	BFR 5	BFR 6	BFR 7	BFR 8	BFR 9	M/E 1	M/E 2	M/E 3	M/E 4	BLACK